
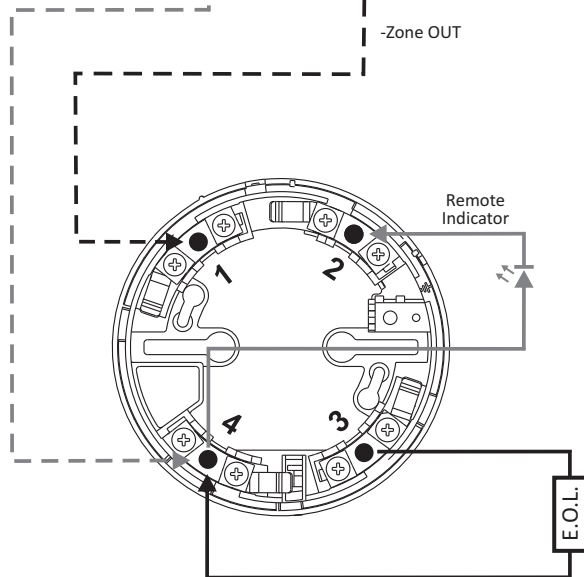


## DETECTOR BASE - CONNECTIONS

### First Detector

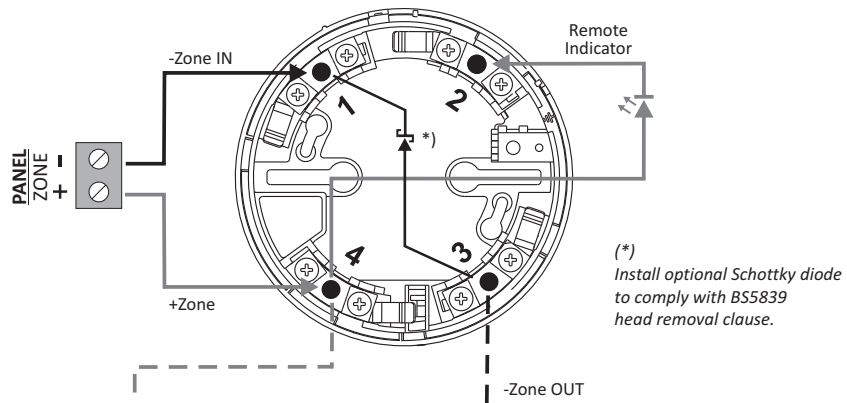

### Last Detector

**NOTE:** Positive terminal of remote indicator should be connected to terminal 4.